

## Rubber Keyswitch Buttons



The rubber keyswitch buttons used on the S2-MSB1, S2-MSB3, S2-MTBS, S2-MTB6 and S2-M6SS modules can be replaced with the buttons below, for a small cost. Please quote the order number below the button when making enquiries or placing an order.

<b>1</b>	<b>2</b>	<b>3</b>	<b>4</b>	<b>5</b>	<b>6</b>	<b>A</b>	<b>ACCEPT</b>
37-808	37-809	37-810	37-811	37-812	37-813	37-851	37-817
<b>AIR</b>	<b>ALL</b>			<b>AUD</b>	<b>AUDIO (STB)</b>	<b>AUTO CUE/PFL</b>	<b>AUTO PRE FADE</b>
37-835	37-815	37-882	37-881	34-914	37-870	34-912	37-863
<b>AUX</b>	<b>AUX 1</b>	<b>AUX 2</b>	<b>B</b>	<b>BCAST LISTEN</b>	<b>BUILD DELAY</b>	<b>C</b>	<b>CH LIST</b>
37-877	37-805	37-806	37-852	37-869	37-843	37-853	37-872
<b>COUGH T/B</b>	<b>CR MON</b>	<b>CUE</b>	<b>CUE PFL</b>	<b>CUE/PFL &amp; T/B</b>	<b>CUT</b>	<b>D</b>	<b>DELAY</b>
37-827	37-909	37-828	34-906	34-907	37-841	37-854	37-818
<b>DESK OUT</b>	<b>DIM</b>	<b>DOOR</b>	<b>DUMP</b>	<b>E</b>	<b>EQ</b>	<b>EXIT</b>	<b>EXIT DELAY</b>
37-823	37-842	37-840	37-819	37-855	34-915	37-874	37-844
<b>EXIT 1</b>	<b>EXIT 2</b>	<b>F</b>	<b>FM 1</b>	<b>FM 2</b>	<b>HYBRID 1</b>	<b>HYBRID 2</b>	<b>INFO</b>
34-910	34-911	37-856	37-837	37-838	37-889	37-890	37-878
<b>INP 1</b>	<b>INP 1</b>	<b>ISDN 1</b>	<b>ISDN 2</b>	<b>LAZY A</b>	<b>LAZY B</b>	<b>LINE HOLD</b>	<b>LINE</b>
<b>INP 2</b>	<b>St C/F</b>	37-825	37-826	37-849	37-850	34-908	<b>GRAM</b>
34-905	37-804						34-930
<b>LOCAL</b>	<b>MIC</b>	<b>MIC 1</b>	<b>MIC</b>	<b>MIC</b>	<b>MODE</b>	<b>MUTE</b>	<b>MYR1</b>
37-891	37-892	<b>MIC 2</b>	<b>LINE</b>	<b>TEL</b>	34-927	37-814	<b>LINE</b>
37-891	37-892	34-902	34-901	37-801	34-927	37-814	37-857
<b>MYR2</b>	<b>MYR3</b>	<b>MYR4</b>	<b>NEWS</b>	<b>OB</b>	<b>OFFER</b>	<b>OK</b>	<b>ON</b>
<b>LINE</b>	<b>LINE</b>	<b>LINE</b>	37-821	37-822	37-816	37-873	34-916
37-858	37-859	37-860	37-821	37-822	37-816	37-873	34-916
<b>ON AIR</b>	<b>ON/OFF</b>			<b>PC</b>	<b>PGM</b>	<b>PGM</b>	<b>PHONE</b>
37-848	37-871	37-879	37-880	37-876	34-913	<b>MFM</b>	37-839
<b>PRE FADE</b>	<b>PRE FADE &amp; TB</b>	<b>PRE</b>	<b>PROD</b>	<b>RACKS</b>	<b>REC</b>	<b>RECEPTION</b>	<b>REH</b>
37-865	37-862	<b>POST</b>	37-832	37-833	37-868	37-834	37-846
<b>RESET</b>	<b>RING MAIN</b>	<b>SPLT CUE/PFL</b>	<b>SPLIT PRE FADE</b>	<b>STANDBY</b>	<b>*</b>	<b>START</b>	<b>START/STOP</b>
34-928	37-824	34-904	37-864	37-847	37-883	37-866	34-926
<b>STATION</b>	<b>STOP</b>	<b>STUDIO</b>	<b>STUDIO 1</b>	<b>STUDIO 2</b>	<b>STUDIO 3</b>	<b>TALKBACK</b>	<b>CALL</b>
37-836	37-867	37-820	37-829	37-830	37-831	37-807	<b>TALK</b>
37-836	37-867	37-820	37-829	37-830	37-831	37-807	37-888
<b>TEL</b>	<b>TV</b>	<b>TV1</b>	<b>TV2</b>	<b>TV3</b>	<b>TV4</b>	<b>TX</b>	
<b>AUX</b>	37-875	37-884	37-885	37-886	37-887	37-845	34-929
37-861	37-875	37-884	37-885	37-886	37-887	37-845	34-929