

Dante® Multi-Channel Audio Interfaces Handbook



AVN-AIO8-DNT 8 Input, 8 Output XLR Dante Interface

AVN-AI16-DNT 16 Input XLR Dante Interface

AVN-AO16-DNT 16 Output XLR Dante Interface

SONIFEX

Audio Solutions for
AV & Broadcast Media

This Handbook is for use with the following products:
 AVN-AIO8-DNT, AVN-AI16-DNT, AVN-AO16-DNT, Multi-Channel Dante® Analogue Audio Interfaces

Revision 1.13, June 2026
 ©Sonifex Ltd, 2026
 All Rights Reserved

Sonifex Ltd, 61, Station Road, Irthlingborough,
 Northants, NN9 5QE, England.
 Tel: +44 (0)1933 650 700
 Email: sales@sonifex.co.uk
 Website: https://www.sonifex.co.uk

Information in this document is subject to change without notice and does not represent a commitment on the part of the vendor. Sonifex Ltd shall not be liable for any loss or damage whatsoever arising from the use of information or any error contained in this manual.

No part of this manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, information storage and retrieval systems, for any purpose other than the purchaser's personal use, without the express written permission of Sonifex Ltd. Unless otherwise noted, all names of companies, products and persons contained herein are part of a completely fictitious adaptation and are designed solely to document the use of Sonifex products.

Made in the UK by
SONIFEX

Contents

Product Warranty - 2 Year Extended	i
Sonifex Warranty & Liability Terms & Conditions	i
1. Definitions	i
2. Warranty	i
Unpacking Your Product	iii
Repairs & Returns	iii
Conformity 	iii
Safety & Installation of Equipment	iii
WEEE Directive	iv
Atmosphere/Environment	iv
1. Introduction	1
2. Controls, Indicators, and Connections	2
Front Panel	2
Front Panel indicators	2
OdBFS line-up	2
Reset	2
Back Panel	3
XLR Line Inputs	4
XLR Line Outputs	4
Ethernet & USB-C Connections	5
3. Dante Controller	6
4. Technical Specification	7

Figures

Fig 2-1: Front Panel	2
Fig 2-2: Front Panel indicators	2
Fig 2-3: AVN-AIO8-DNT Rear Panel	3
Fig 2-4: AVN-AI16-DNT Rear Panel	3
Fig 2-5: AVN-AO16-DNT Rear Panel	4
Fig 2-6: Ethernet, PoE & USB-C Connections	5

Register Online for an Extended 2 Year Warranty

As standard, Sonifex products are supplied with a 1 year back to base warranty.

If you register the product online, you can increase your product warranty to 2 years and we can also keep you informed of any product design improvements or modifications

To register your product, please go online to www.sonifex.co.uk/register

This is the entire Contract between the parties relating to the subject matter hereof and may not be changed or terminated except in writing in accordance with the provisions of this Contract. A reference to the consent, acknowledgement, authority or agreement of the Company means in writing and only by a director of the Company.

2. Warranty

- a. The Company agrees to repair or (at its discretion) replace Goods which are found to be defective (fair wear and tear excepted) and which are returned to the Company within the Warranty Term provided that each of the following are satisfied:
- i. notification of any defect is given to the Company immediately upon its becoming apparent to the Purchaser;
 - ii. the Goods have only been operated under normal operating conditions and have only been subject to normal use (and in particular the Goods must have been correctly connected and must not have been subject to high voltage or to ionising radiation and must not have been used contrary to the Company's technical recommendations);
 - iii. the Goods are returned to the Company's premises at the Purchaser's expense;
 - iv. any Goods or parts of Goods replaced shall become the property of the Company;
 - v. no work whatsoever (other than normal and proper maintenance) has been carried out to the Goods or any part of the Goods without the Company's prior written consent;
 - vi. the defect has not arisen from a design made, furnished or specified by the Purchaser;

Product Warranty - 2 Year Extended

As standard, Sonifex products are supplied with a 1 year back to base warranty. In order to register the date of purchase and so that we can keep you informed of any product design improvements or modifications, it is important to complete the warranty registration online. Additionally, if you register the product on the Sonifex website, you can increase your product warranty to 2 years. Go to the Sonifex website at: www.sonifex.co.uk/register to apply for your 2 year warranty.

Sonifex Warranty & Liability Terms & Conditions

1. Definitions

'the Company' means Sonifex Ltd and where relevant includes companies within the same group of companies as Sonifex Limited.

'the Goods' means the goods or any part thereof supplied by the Company and where relevant includes: work carried out by the Company on items supplied by the Purchaser; services supplied by the Company; and software supplied by the Company.

'the Purchaser' means the person or organisation who buys or has agreed to buy the Goods.

'the Price' means the Price of the Goods and any other charges incurred by the Company in the supply of the Goods.

'the Warranty Term' is the length of the product warranty which is usually 12 months from the date of despatch; except when the product has been registered at the Sonifex website when the Warranty Term is 24 months from the date of despatch.

'the Contract' means the quotation, these Conditions of Sale and any other document incorporated in a contract between the Company and the Purchaser.

Warranty Registration

- e. At the request and expense of the Purchaser the Company will test the Goods to ascertain performance levels and provide a report of the results of that test. The report will be accurate at the time of the test, to the best of the belief and knowledge of the Company, and the Company accepts no liability in respect of its accuracy beyond that set out in Condition (a).
- f. Subject to Condition (e) no representation, condition, warranty or other term, express or implied (by statute or otherwise) is given by the Company that the Goods are of any particular quality or standard or will enable the Purchaser to attain any particular performance or result, or will be suitable for any particular purpose or use under specific conditions or will provide any particular capacity, notwithstanding that the requirement for such performance, result or capacity or that such particular purpose or conditions may have been known (or ought to have been known) to the Company, its employees or agents.
- g.
 - (i) To the extent that the Company is held legally liable to the Purchaser for any single breach of contract, tort, representation or other act or default, the Company's liability for the same shall not exceed the price of the Goods.
 - (ii) The restriction of liability in Condition (g)(i) shall not apply to any liability accepted by the Seller in Condition (c).
- h. Where the Goods are sold under a consumer transaction (as defined by the Consumer Transactions (Restrictions on Statements) Order 1976) the statutory rights of the Purchaser are not affected by these Conditions of Sale.
- vii. the Goods have been assembled or incorporated into other goods only in accordance with any instructions issued by the Company;
- viii. the defect has not arisen from a design modified by the Purchaser;
- ix. the defect has not arisen from an item manufactured by a person other than the Company. In respect of any item manufactured by a person other than the Company, the Purchaser shall only be entitled to the benefit of any warranty or guarantee provided by such manufacturer to the Company.
- b. In respect of computer software supplied by the Company the Company does not warrant that the use of the software will be uninterrupted or error free.
- c. The Company accepts liability:
 - i. for death or personal injury to the extent that it results from the negligence of the Company, its employees (whilst in the course of their employment) or its agents (in the course of the agency);
 - ii. for any breach by the Company of any statutory undertaking as to title, quiet possession and freedom from encumbrance.
- d. Subject to conditions (a) and (c) from the time of despatch of the Goods from the Company's premises the Purchaser shall be responsible for any defect in the Goods or loss, damage, nuisance or interference whatsoever consequential economic or otherwise or wastage of material resulting from or caused by or to the Goods. In particular the Company shall not be liable for any loss of profits or other economic losses. The Company accordingly excludes all liability for the same.

CE Conformity

The products in this manual comply with the essential requirements of the relevant European health, safety and environmental protection legislation.

The technical justification file for this product is available at Sonifex Ltd.

The declaration of conformity can be found at: <https://www.sonifex.co.uk/declarations>

Safety & Installation of Equipment

There are no user serviceable parts inside the equipment. If you should ever need to look inside the unit, always disconnect the mains supply before removing the equipment covers. The cover is connected to earth by means of the fixing screws. It is essential to maintain this earth/ground connection to ensure a safe operating environment and provide electromagnetic shielding.

Unpacking Your Product

Each product is shipped in protective packaging and should be inspected for damage before use. If there is any transit damage take pictures of the product packaging and notify the carrier immediately with all the relevant details of the shipment. Packing materials should be kept for inspection and also in case the product needs to be returned.

The product is shipped with the following equipment so please check to ensure that you have all of the items below. If anything is missing, please contact the supplier of your equipment immediately.

Item	Quantity
Product unit	1

Repairs & Returns

Please contact Sonifex or your supplier if you have any problems with your Sonifex product. Email technical.support@sonifex.co.uk for the repair/upgrade/returns procedure, or for support & questions regarding the product operation.

WEEE Directive



The Waste Electrical and Electronic Equipment (WEEE) Directive was agreed on 13 February 2003, along with the related Directive 2002/95/EC on Restrictions of the use of certain Hazardous Substances in electrical and electronic equipment (RoHS). The Waste Electrical and Electronic Equipment Directive (WEEE) aims to minimise the impacts of electrical and electronic equipment on the environment during their life times and when they become waste. All products manufactured by Sonifex Ltd have the WEEE directive label placed on the case. Sonifex Ltd will be happy to give you information about local organisations that can reprocess the product when it reaches its “end of use”, or alternatively all products that have reached “end of use” can be returned to Sonifex and will be reprocessed correctly free of charge.

Atmosphere/Environment

This apparatus should be installed in an area that is not subject to excessive temperature variation (<0°C, >50°C), moisture, dust or vibration.

This apparatus shall not be exposed to dripping or splashing, and no objects filled with water, such as vases shall be placed on the apparatus

1. Introduction

These multi-channel Dante® audio interfaces convert balanced and unbalanced analogue inputs and outputs to Dante AoIP. Simple to configure and operate, these cost-effective rack-mount solutions provide an easy integration path for AV professionals and system integrators.

Sonifex Part Numbers and Descriptions:

- **AVN-AIO8-DNT**
Provides 8 analogue audio inputs and 8 analogue audio outputs on Neutrik XLR connectors.
- **AVN-AI16-DNT**
Provides 16 analogue audio inputs on Neutrik XLR connectors.
- **AVN-AO16-DNT**
Provides 16 analogue audio outputs on Neutrik XLR connectors.

Features:

- Dual PoE for data and power redundancy.
- USB-C power input, if PoE is unavailable.
- Accepts balanced and unbalanced analogue line-level signals.
- Adjustable global OdBFS line-up (+12dBu/+18dBu/+24dBu = 0dBFS).
- 1U 19" rack-mount aluminium chassis.
- Lightweight and compact with a front-back depth under 11cm (4.4 inches).
- Rear-panel mount for single/top locking USB-C cables.
- Configuration using Dante Controller.

2. Controls, Indicators, and Connections

This section contains information about the interactivity of the different panels of the device, such as LED descriptions, functions and connector pin-outs.

Front Panel

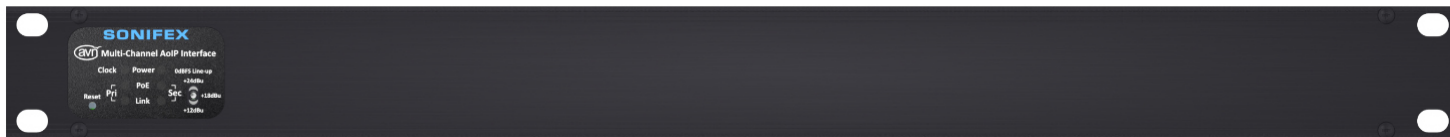


Fig 2-1: Front Panel



Fig 2-2: Indicators and Reset

On the left-hand side of the front panel are the status LEDs and reset button.

Clock

The clock status LED is illuminated green when the device is a PTP master or synced to a valid PTP master.

Power

The power status LED is illuminated green when USB-C power is available.

PoE

The PoE status LED is illuminated when power over Ethernet is available. Independent LEDs show PoE status on both Primary and Secondary Ethernet connections.

Link

The link status LED is illuminated when the device is connected to a valid network. Independent LEDs show link status on both Primary and Secondary Ethernet connections.

0dBFS line-up

The 0dBFS line-up level is selectable between +12dBu, +18dBu and +24dBu. It is a global setting that affects all inputs and outputs.

Reset

In the unlikely event that the unit fails to respond, press the reset button to reboot the unit. This does not remove the Dante Controller configured settings.

Back Panel

The back panel of the device provides access to all the inputs and outputs.

AVN-AIO8-DNT 8 Input, 8 Output Dante® Interface with XLR Connectivity

Eight locking XLR inputs and eight XLR outputs are available.

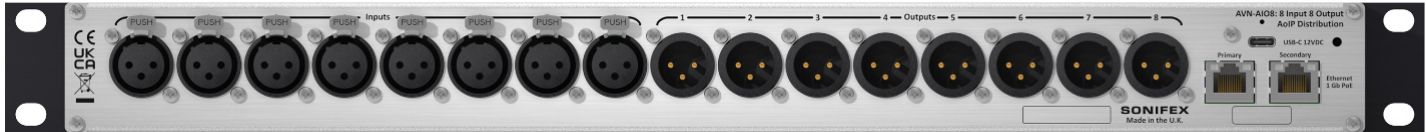


Fig 2-3: AVN-AIO8-DNT Rear Panel

AVN-AI16-DNT 16 Input Dante® Interface with XLR Connectivity

Sixteen locking XLR inputs are available.

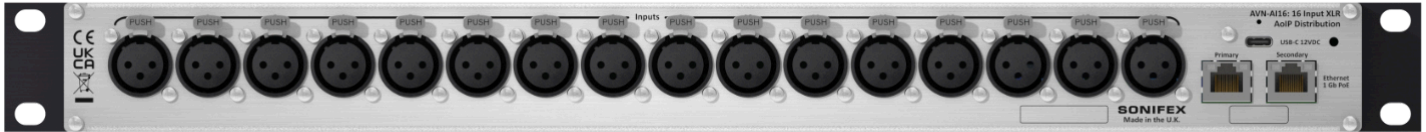


Fig 2-4: AVN-AI16-DNT Rear Panel

AVN-AO16-DNT 16 Output Dante® Interface with XLR Connectivity

Sixteen XLR outputs are available.

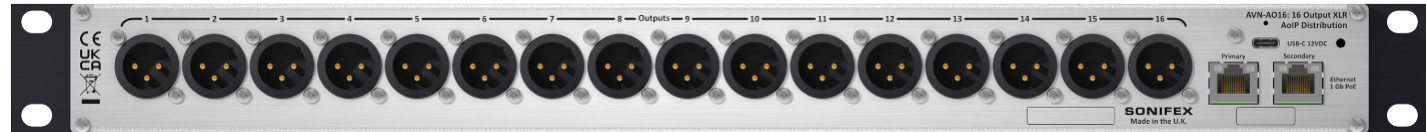


Fig 2-5: AVN-AO16-DNT Rear Panel

2 Controls, Indicators and Connections

Each of the analogue audio inputs and outputs can be routed in Dante Controller, to receive/transmit AoIP streams.


The 0dBFS line-up level is selectable between +12dBu, +18dBu and +24dBu using the front panel switch. It is a global setting that affects all inputs and outputs.

XLR Line Inputs

The XLR-3 input connectors can take balanced professional levels, or unbalanced by connecting the non-phase to the signal ground.

The line inputs have the following pin-out.

Pin	Function
1	Chassis Ground/Screen
2	Input Phase/Positive
3	Input Non-Phase/Negative

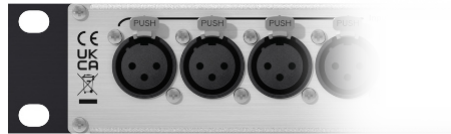

XLR Line Outputs

The XLR 3 pin outputs are electronically balanced, and can be wired unbalanced. Each output is individually buffered so that a short circuit on one output will not affect the others. The line outputs have the following pin-out.

Pin	Function
1	Chassis Ground/Screen
2	Output Phase/Positive
3	Output Non-Phase/Negative



Ethernet Dante® Connection(s)

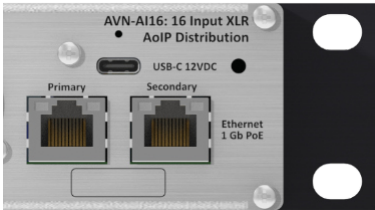


Fig 2-6: Ethernet, PoE & USB-C Connections

On the right hand side of the rear panel is a dual redundant Ethernet/PoE & USB-C 12V DC connection.

The Ethernet connections provide PoE and networking capability. There are two status LEDs on the RJ45 connector. The left LED indicates the link speed, the right indicates link activity.

Left LED	Green	Off
Link Speed	1Gbps	100Mbps

The LED on the right indicates traffic on the connection. When the LED is flashing Amber / Yellow, data is being transmitted/received.

3. Dante Controller

1. Download & Install

1. Go to the Audinate website:
<https://www.audinate.com/products/software/dante-controller>
2. Create an account (if required).
3. Download Dante Controller for your OS.
4. Run the installer and follow on-screen instructions.
5. Launch Dante Controller from your applications menu.

Full guide: <http://dev.audinate.com/GA/dante-controller/userguide/pdf/latest/>

2. Discover & Open Devices

1. Ensure your computer and devices are on the same network.
2. Open Dante Controller.
3. Locate your device in the routing grid.
4. Double-click the device name to open **Device View**.

3. Basic Device Configuration

Rename Device

1. Open *Device View* → *Device Config*.
2. Enter a new name and click **Apply**.

Label Channels

1. Go to *Receive* or *Transmit* tab.
2. Edit channel names as required.

4. Route Audio

1. In the routing grid, locate the intersection of a transmitter and receiver.
2. Click the box to create a connection.
3. Confirm successful routing (green check icon).

5. Check Clock Synchronisation

1. Open *Device View* → *Clock Status*.
2. Confirm:
 - One device is Master
 - Others are Followers
3. (Optional) Enable **Preferred Master** if required.

6. AES67 Mode (If required)

1. Open *Device View* → *AES67 Config*.
2. Enable AES67 and confirm prompts.
3. Reboot the device.
4. Ensure multicast addresses match required format.

Refer to official Dante documentation for full AES67 setup details.

7. Network Troubleshooting

1. Ensure device and computer are on the same subnet.
2. If devices appear in red:
 - Adjust your computer's IP settings.
 - Restart Dante Controller.
3. Disable unused network adapters if necessary.

FAQs: <https://www.audinate.com/resources/faqs>

Summary

1. Install Dante Controller
2. Connect to the same network
3. Open Device View
4. Configure names and channels
5. Route audio via the grid
6. Verify clocking

4. Technical Specification

Audio Input Performance Specifications

Input Impedance:	>20kΩ balanced
0dBFS line-up:	User selectable +12dBu/+18dBu/+24dBu
Frequency Response:	20Hz to 20kHz, +0/-0.2dB
THD+N:	<-110dBFS, -30dBFS, 20Hz to 20kHz, 20kHz BW
Noise:	-110dBFS, 20kHz BW, Rs=200Ω
Crosstalk:	<-100 dB
Common Mode Rejection:	>60dB @ 1kHz

Audio Output Performance Specifications

Output Impedance:	<50Ω balanced
0dBFS line-up:	User selectable +12dBu/+18dBu/+24dBu
Frequency Response:	20Hz to 20kHz, +0/-0.5dB
THD+N:	<-107dBFS, -30dBFS, 20Hz to 20kHz, 20kHz BW
Noise:	-107dBFS, 20kHz BW
Crosstalk:	<-100dB

Balanced Line Input XLR Pinout

Pin	Function
1	Chassis Ground/Screen
2	Input Phase/Positive
3	Input Non-Phase/Negative

Balanced Line Output XLR Pinout

Pin	Function
1	Chassis Ground/Screen
2	Output Phase/Positive
3	Output Non-Phase/Negative

Dante

Sample Rate:	44.1kHz, 48kHz, 88.2kHz, 96kHz, 176.4kHz, 192kHz
Encoding:	PCM 16, PCM 24, PCM 32

PoE Power

Standard:	802.3af
Class:	0
PD Power Range:	0.44W to 12.94W
Typical PSE Power Usage:	(AVN-AIO8-DNT): 7.5W (AVN-AI16-DNT): 6W (AVN-AO16-DNT): 8W
Max PSE Power Usage:	All Units: 15.4W

USB-C Power Input

Voltage:	9V - 15V
Power:	12W

Equipment Type

AVN-AIO8-DNT	8 Input, 8 Output Dante® Interface
AVN-AI16-DNT	16 Input Dante® Interface
AVN-AO16-DNT	16 Output Dante® Interface

Physical Specification

Dimensions (Raw):	48cm (W) x 11cm (D) x 4.3cm (H)(1U) 19" (W) x 4.3" (D) x 1.7" (H)
Weight (AVN-AIO8-DNT, AVN-AI16-DNT, AVN-AO16-DNT):	Nett: 1.1kg Gross: 1.6kg Nett: 2.4lbs Gross: 3.5lbs

SONIFEX

www.sonifex.co.uk

t:+44 (0)1933 650 700
sales@sonifex.co.uk

SONIFEX

Audio Solutions for
AV & Broadcast Media